



UAS

Toolbox™

Installation Guide

Rel 3

READ FIRST

(IMPORTANT LICENSE INFORMATION ENCLOSED)

Aerial Information Systems Corporation

1439 Live Oak Street, Suite C

Niceville, FL 32578

www.aisc.aero

1 Important Information

1.1 User Notice

The UAS Toolbox™ (“Software”) is licensed to you (“User”) by Aerial Information Systems Corporation (“AISC”). Installing this toolbox constitutes acknowledgement and agreement to the conditions set forth in this section.

1.2 License

The Software is a collection of functions which are licensed individually can be purchased separately. This license applies to each and every function within the Software.

The license allows you to:

- (a) Use one copy of the Software on a single computer at a time. To “use” the Software means that the Software is either loaded in the temporary memory of a computer or installed on a hard drive or other removable media connected to a computer.
- (b) Make a reasonable number of backup copies on media accessible only by the User’s technical representative.
- (c) Install one copy on a desktop computer and one copy of a laptop computer per user subject to the restrictions of (a).
- (d) Use the software until the license is terminated.
- (e) Use the software for code generation or compilation of stand-alone applications as long as the applications are not for resale or deployment to more than two computers.

1.3 Restrictions

The Software contains trade secrets in its human perceivable form and, to protect them, you may not reverse engineer, decompile, disassemble or otherwise reduce the software to any human perceivable form. You may not modify, adapt, translate or create derivative works based upon the software or any part thereof without written permission of AISC. Furthermore, you may not sale, rent, lease or loan the Software.

1.4 Termination

This License will terminate immediately if you fail to comply with any provision of the License. Upon termination, all copies of the Software must be destroyed.

1.5 Trademarks

UAS Toolbox™ is a trademark of AISC.

1.6 Export Law Assurance

You agree that neither the Software nor any direct product thereof is being or will be shipped, transferred or re-exported, directly or indirectly into any country prohibited by the United States Export Administration Act and the regulations there under or will be used for any purpose prohibited by the Act.

1.7 Limited Warranty

AISC warrants for a period of ninety (90) days for your date of receipt that (i) the media on which the Software is recorded will be free from defects in materials and workmanship under normal use and (ii) the Software as provided by AISC will substantially conform to AISC specifications for the Software. AISC's entire liability and your sole and exclusive remedy for any breach of the foregoing limited warranty will be, at AISC's discretion, replacement of the media, repair or replacement of the Software or refund of the purchase price. To be entitled to warranty service the User shall register the Software upon receipt. The User shall contact AISC Technical support (www.aisc.aero/support) for warranty claims. In the event applicable law imposes any implied warranties, the implied warranty period is limited to ninety (90) days from the date of receipt. Some jurisdictions do not allow such limitations on duration of an implied warranty, so the above limitation may not apply to you. TO THE EXTENT PERMITTED BY APPLICABLE LAW, THE COMPANY AND ITS SUPPLIERS DISCLAIM ALL OTHER WARRANTIES, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WITH REGARD TO THE SOFTWARE AND ANY RELATED OR ACCOMPANYING WRITTEN MATERIALS.

1.8 Limitation of Liability

THE ENTIRE RISK ARISING OUT OF THE USE OR PERFORMANCE OF THE SOFTWARE AND DOCUMENTATION REMAINS WITH USER. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL AISC OR ITS SUPPLIERS BE LIABLE FOR ANY CONSEQUENTIAL, INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE, OR OTHER DAMAGES WHATSOEVER (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION, OR OTHER PECUNIARY LOSS) ARISING OUT OF THIS AGREEMENT OR THE USE OF OR INABILITY TO USE THE SOFTWARE, EVEN IF AISC HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. BECAUSE SOME STATES/JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, THE ABOVE LIMITATION MAY NOT APPLY TO LICENSEE. THIS DISCLAIMER CONSTITUTES AN ESSENTIAL PART OF THIS AGREEMENT. NO USE OF THE PRODUCTS IS AUTHORIZED HEREUNDER EXCEPT UNDER THIS DISCLAIMER.

1.9 Support

 
The User is entitled to software support at the discretion of AISC (see www.aisc.aero for the latest information). Purchase of the Software entitles the User to lifetime support via email and the AISC website. Bugs in the Software may be discovered from time to time. Corrections will be sent out as an update to all eligible Users. Support is only granted to registered Users of the Software. If you did not register at the time of purchase, please visit the support website for registration.

2 Installation


2.1 Windows Installer

A Microsoft Windows® installer/uninstaller is provided for the full UAS Toolbox™.


- Execute the installer. Read the License Agreement and Press “I Agree” if you agree to it.

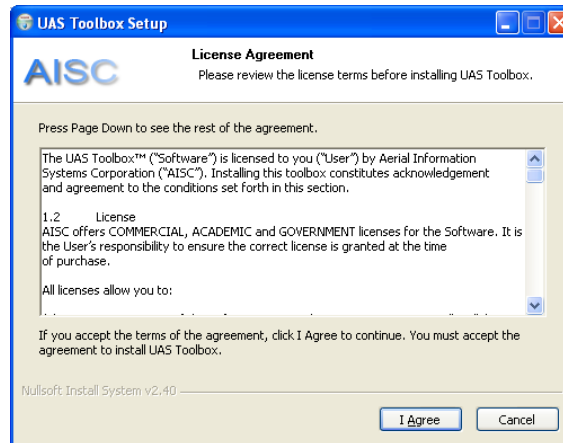



- Select the components you want to install. We recommend you accept the default of a full installation.

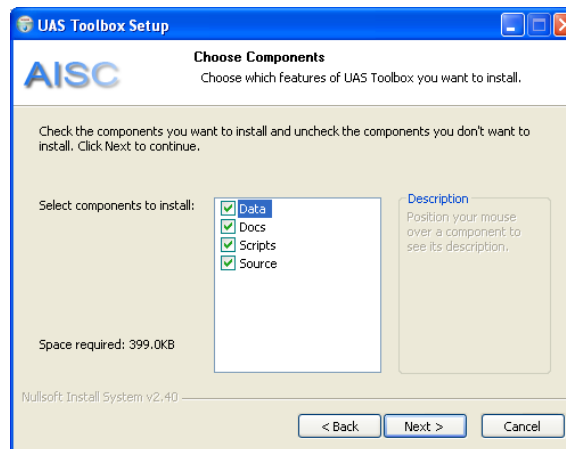



- Select the destination folder and press “Click.”

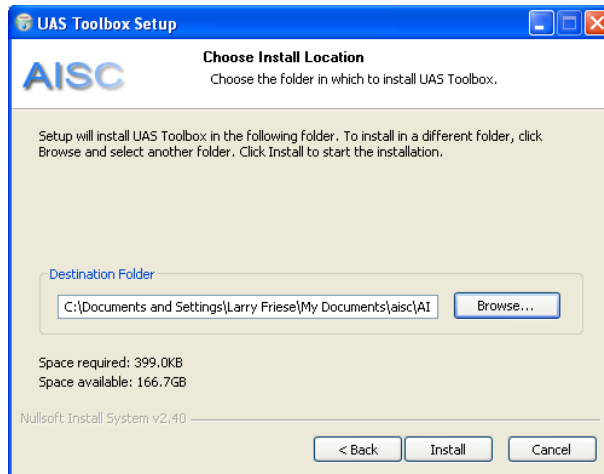

 - Once the installation is complete, Press "Close."

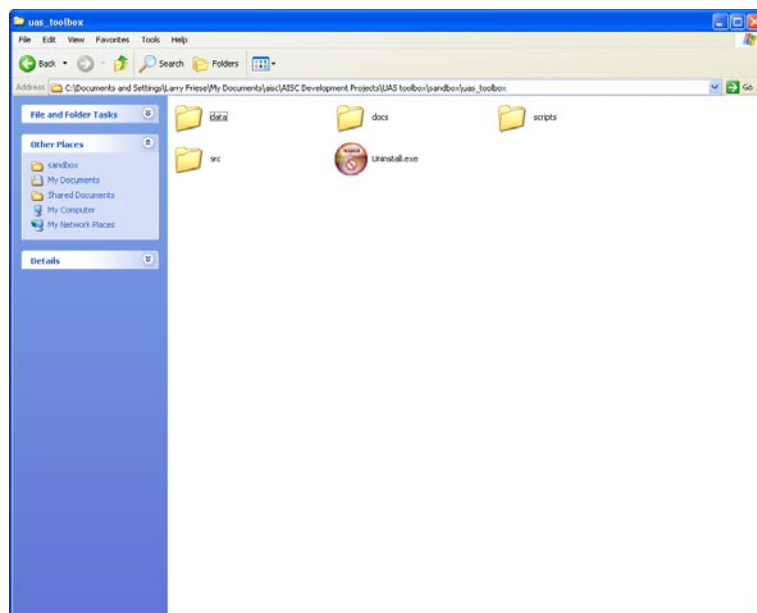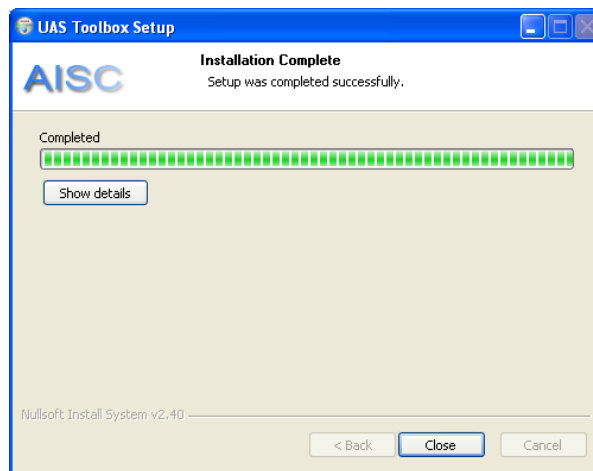

- To uninstall, go to the uast folder and run *uninstall.exe*. Press “Uninstall” to start to process. **IMPORTANT: The entire uast folder will be deleted.** When the process is complete, press “Close.” If you ran the uninstaller from a window, the window may disappear when once the process is complete.

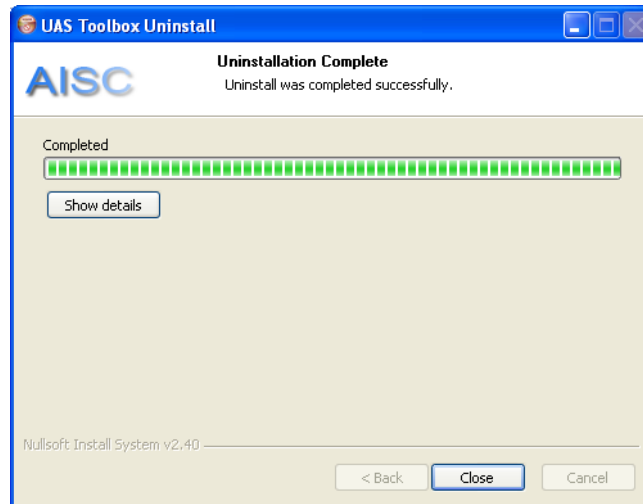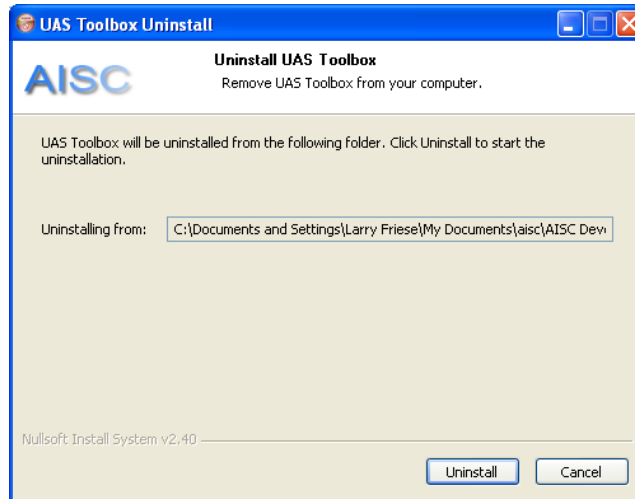

- Go to Section 2.3.

2.2 Manual Installation

Manual installation is currently required for non-Windows operating systems and when installing individual functions and performing updates.

Table 1. Manual Installation

Step	Action
1	Read and acknowledge the license in this document.
2	Create the directory uast
3	Extract the installation zip file into uast . The directory structure will be the same as pictured above.
4	Go to Section 2.3

Table 2. Function By Function Installation (New and Updates)

Step	Action
1	If new install, complete steps 1 and 2 of Table 1, then proceed to Step 3
2	Within the uast directory, create the following directories: src data scripts docs
3	Place m-files in src Place mat files in data Place demo, how-to, etc scripts in scripts Place documentation in docs (<i>optional</i>)
4	Go to Section 2.3

NOTE: To uninstall a manual installation, you just need to delete the files and directories. You should perform this action before using the Windows installer.

2.3 Setup

Once the toolbox is installed, you need to add it to your Matlab® path. Select “Set Path...” and press “Add with Subfolders...” Select the **uast** and press “Save.” Remember to delete these from the Matlab® path if you uninstall the software.

3 Revision History

Release	Date	Remarks
1	12.19.2008	Initial release
2	1.27.2009	Updated license. Removed A La Carte steps.
3	5.19.2009	Updated license and created function by function Installation steps.